

Quick Start Guide



Questions? Call Us!
(732) 364-9900

Get the Dialed In App!

- Step 1:** Visit the App Store on your smartphone.
- Step 2:** Search for "Jersey Jack Pinball".
- Step 3:** Click download & install the free App!

Like + Follow Us Online!



JerseyJackPinball



@JJPinball



JerseyJackPinball

Register Your Game!

<http://store.jerseyjackpinball.com/Game-Registration/>
Registration enables your JJP Game Warranty and enters you into free random drawings for t-shirts and other JJP prizes!

DIALED IN!®

Backbox Lock

Line Cord Plug
(Behind Cabinet)

Flipper Buttons

Start Button

Headphones +
Volume Control

Camera*

Ball Shooter

Front Door Lock

On / Off Switch
(Under Cabinet)




* The Camera can display the player's picture on screen during the various game modes
A lens cover is provided for operators that do not wish to utilize this feature

Service@JerseyJackPinball.com

www.JerseyJackPinball.com

Quick Start Guide

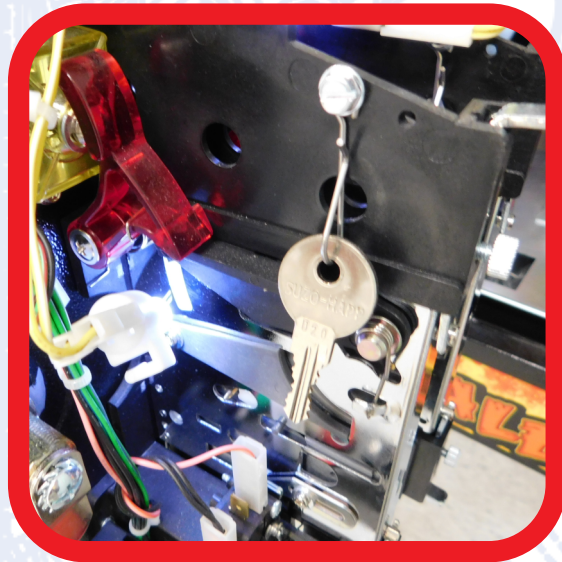

Key for Backbox Lock is hanging inside coin door.



Use buttons inside coin door to access & navigate Test Menu.



Game Operators can quickly switch the default Home settings:
Enter Button -> Game Presets -> Install Coin-Op


CONNECTING TO THE JERSEY JACK PINBALL APP

After starting a new game & **before you launch your first ball**, press and hold the **LEFT** flipper button on the game cabinet **AND** on the App screen. Game will display a message on the monitor if player login was successful. **Bluetooth on device must be enabled!**

CALIBRATE PLAYFIELD ANGLE

For ideal speed of play, adjust leg castors until top of bubble is touching the **SECOND LINE**

Level is located to right of ball shooter lane!

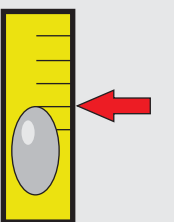

Ensure that you have the latest software code for your game!
Visit the Downloads section on our Support page for updates & instructions.