# mportant Game Information

Backbox Lock (Behind Cabinet)

Line Cord Plug (Behind Cabinet)

Left Flipper Button

Start Button

Headphones + Volume Control

DIDATES (ADIRREA) JERSEY JACK PIRATES # CARIBBEAN



Topper (LE / CE Only)

Camera\*

Action Button

**Right Flipper** Button

Ball Shooter

On / Off Switch (Under Cabinet)

Step 1: Visit http://www.jerseyjackpinball.com/support/ Step 2: Click on "Downloads". **Step 3:** Select "Pirates" and click the download link.

**JerseyJackPinball @JJPinball** 

**Register Your Game!** http://store.jerseyjackpinball.com/Game-Registration/ **Registration enables your JJP Game Warranty** and enters you into free random drawings for t-shirts and other JJP prizes!

\* The Camera can display the player's picture on screen during the various game modes You may disable the camera in Game Options, if you do not wish to utilize this feature

### Service@JerseyJackPinball.com

### www.JerseyJackPinball.com

# **Questions?** Call Us! (732) 364-9900



## **Download Game Manual!**


## Like + Follow Us Online!





**JersevJackPinball** 

# mportant Game Information

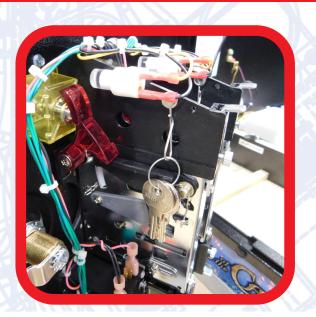

Key for Backbox Lock is hanging inside coin door.



Use buttons inside coin door to access & navigate Test Menu.

PLEASE CHECK AFTER UNPACKING YOUR GAME

✓ Leg protectors in place, cabinet legs are secure and stable. ✓ All shipping foam blocks & bubble wrap are removed. ✓ Visited the JJP Website to register your new game! See additional sheets located on the playfield glass for info!

### **Game Operators can quickly** switch the default Home settings:


Enter Button -> Game Presets -> Install Coin-Op

### **CALIBRATE PLAYFIELD ANGLE**

of ball shooter lane For ideal speed of play, adjust leg castors until top of bubble is touching the **SECOND LINE** 

Ensure that you have the latest software code for your game! Visit the Downloads section on our Support page for updates & instructions.

Service@JerseyJackPinball.com

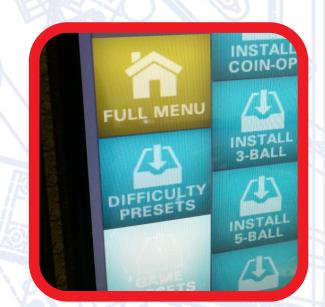

## www.JerseyJackPinball.com